

aiwa

**BOOM  
BOX**  
WIRELESS  
SPEAKER


**INSTRUCTION MANUAL**

ASP-0750

Thank you for purchasing the Boom Box Wireless Speaker.  
This manual provides more information about this wireless speaker,  
please read the instructions before using.



**Product Overview**

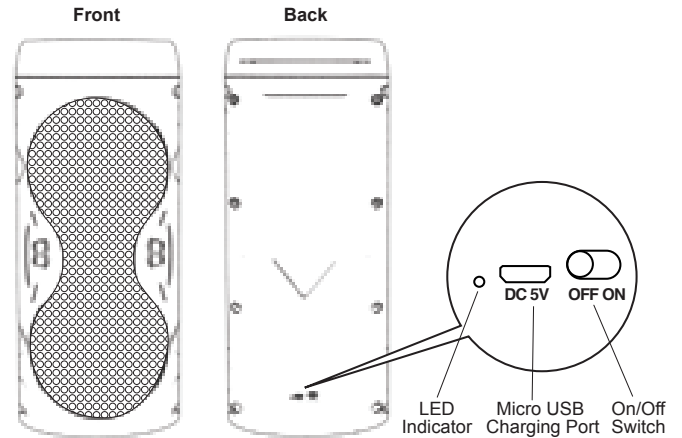

**Package Contents**

Boom Box Wireless Speaker x 1pc  
Micro USB Charging Cable x 1pc  
Instruction Manual x 1pc

**Power On/Off**

**Power on**

Slide the ON/OFF switch to the "ON" position.

**Power off**

Slide the ON/OFF switch to the "OFF" position.

**Pair Wireless speaker with your mobile device**

1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 10 metres.
2. Power on the wireless speaker.
3. Activate the Bluetooth function on your phone within range and select "Aiwa ASP-0750" from the list shown.
4. You will hear a beep sound when pairing is successful.

## Reconnect Wireless speaker to your mobile device

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

## Charging your Wireless speaker

⚠ For your safety, please always use appropriate 5V input charger/ Adapter to charge the product.

1. Use the Micro USB cable provided with this wireless speaker.
2. Connect the Micro USB plug to Micro USB charging port on the speaker, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.
3. The light will turn red while charging and will turn off once fully charged.



## Technical specification

Driver Diameter: 2x4 Inches  
Output: 2x5W  
Impedance: 4 Ohms  
Power Supply: Li-ion Battery 3.7V 1200mAh  
Play Time: 4.5 - 5 Hours  
Charging Time: 2.5 - 3 Hours  
Bluetooth Version: 5.0  
Micro USB cable included.

## FAQ

◆ **If the Wireless speaker cannot be paired with your device, please try the following:**

Ensure that your speaker is in pairing mode or reconnection mode.  
Ensure that Bluetooth search function of your mobile device is activated.  
If your device is already paired with another Bluetooth device, 'unpair' this first.  
Move your device closer to the speaker.

◆ **If the Wireless speaker cannot be recharged:**

If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

## ⚠ Safety instructions for the lithium battery and the product

- The input voltage to the product is DC 5V 1A.
- In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
- Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/ 104°F.
- Do not expose the product to direct heat, fires or other high temperature locations. Do not place in direct sunlight, or use or store it inside cars in hot weather. Doing so may cause the battery to generate heat, explode or ignite.
- Switch off the product after use.
- Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
- In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.
- This product is not a toy. Young children must be supervised to ensure that they do not play with the product.
- Do not expose the speaker to moisture or submerge it in liquids.

Keep All Relevant Information for Future Reference